InFocus®

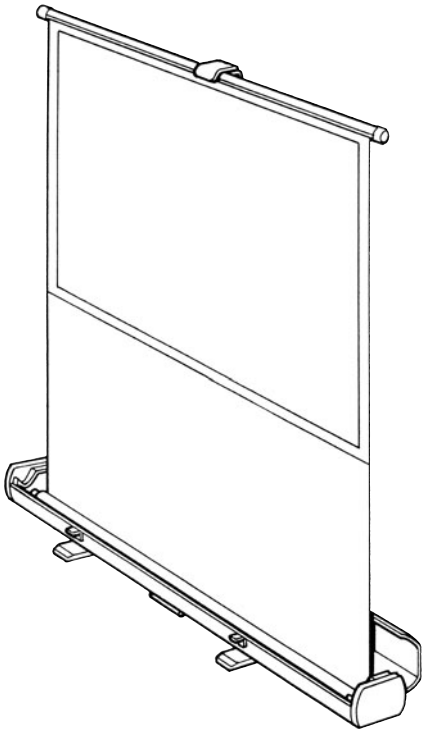

INSTRUCTION BOOK FOR

60" AND 80" FLOOR SCREEN

SC-FLR WHT-60

SC-FLR WHT-80

InFocus Corporation
27700 SW Parkway Ave
Wilsonville OR 97070
800-294-6400
www.InFocus.com

INTRODUCTION

Thank you for purchasing this InFocus product. Before attempting to use it, make sure to carefully read the contents of these instructions.

CAUTION!

1. Avoid touching the films during raising or lowering of unit.
2. Do not set up the screen on an unstable or uneven surface. This may cause the screen to fall or tip over, resulting in damage to the screen or personal injury. Be especially careful when setting up at home where small children may be present.
3. When screen is not in use and retracted, use the built-in feet to stabilize it on a flat surface. Standing the screen on one of its ends creates the risk of falling over, and should be avoided.
4. Do not hang or attach items to the screen.

CARE OF SCREEN

1. Do not leave the screen in areas subject to direct sunlight.
2. Keep the projection surface of the screen free from dirt and dust, which can interfere with the quality of the projected image. If the screen becomes dirty, lightly wipe it off with soft cloth moistened in a weak, 20 to 1 solution of a mild neutral detergent and water. Benzine, thinner, and other volatile agents can cause permanent damage to the screen and should never be used for cleaning.
3. Do not set up the screen in areas subjected to strong breeze. This may cause the screen to move and interfere with the quality of the projected image.

PARTS IDENTIFICATION

1. Slat handle
2. Screen film
3. Skirt film
4. Left end cap
5. Rotating foot
6. Bottom case
7. Right end cap
8. Case cover
9. Case latch
10. Slat
11. Long arm
12. Upper arm hinge
13. Short arm
14. Lower arm hinge
15. Air shock
16. Case handle

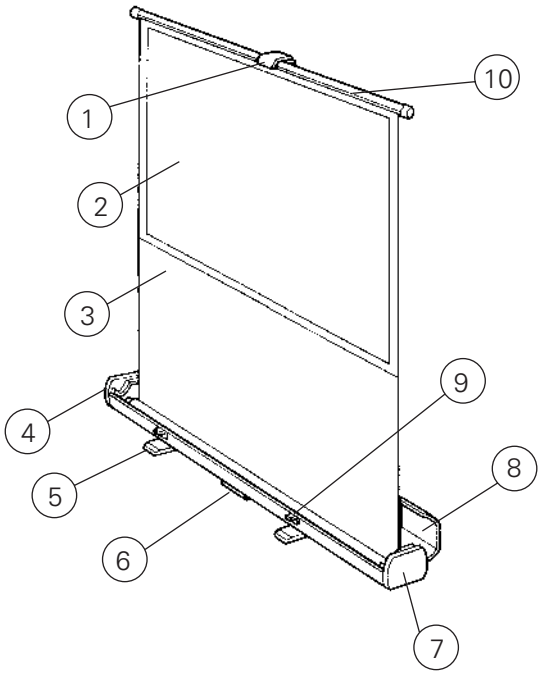

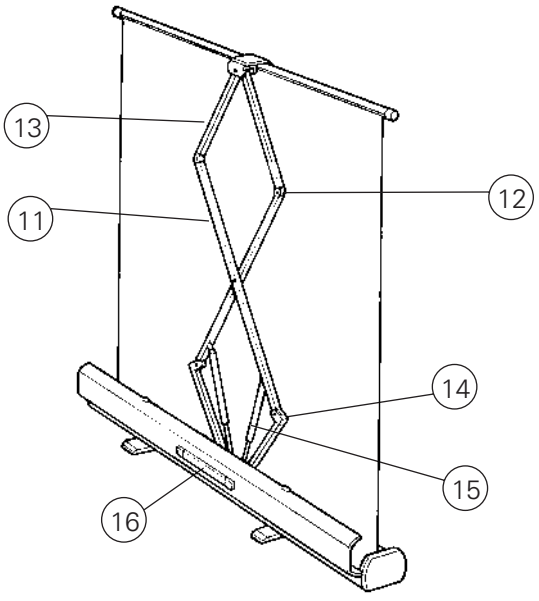

SETTING UP THE SCREEN

1. Rotate feet until they are perpendicular with the case.

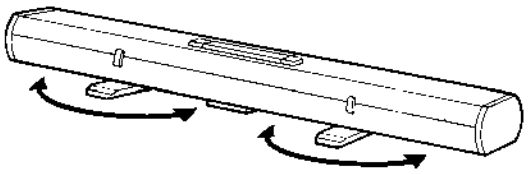

2. Release the latches and open the case cover.
Note: Push lightly down on the center of the case to release the latches.

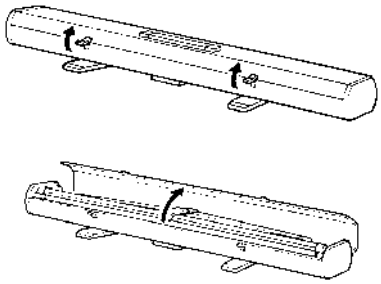

3. Grasp the Slat Handle and raise the screen slowly, keeping the slat level as you raise the screen.

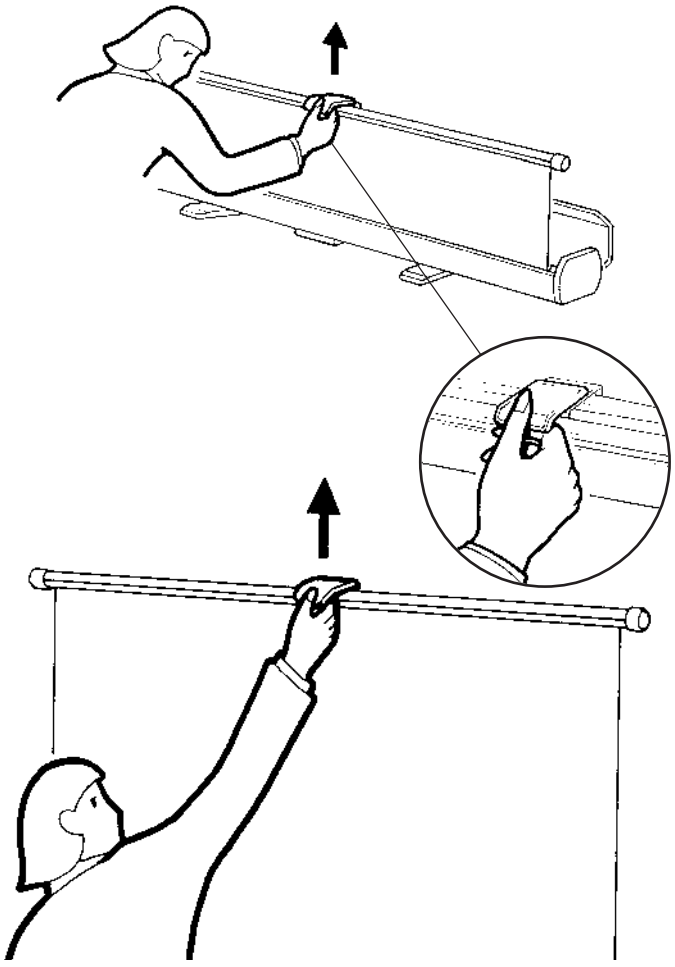

STORING THE SCREEN

4. Grasp the Slat Handle and lower the screen slowly back into the case. Make sure you hold onto the handle and keep the slat level as you lower the screen back into the case.

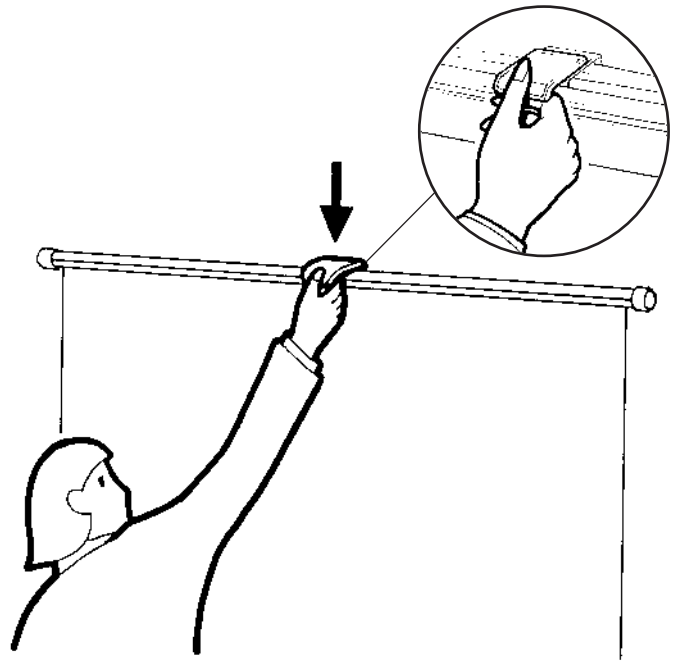

5. Close the case cover and latch it. It may be necessary to press down on the case top to get the latches to engage properly.

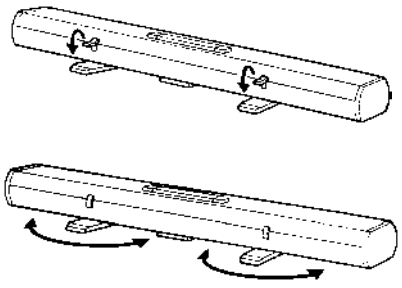

Note: Before carrying the case, rotate the feet, so they are out of the way.

WARNING
When storing the screen, be sure that you protect it from falling. Leaning the case against a wall or other surface creates the danger of falling over.

SPECIFICATIONS

Dimensions: see drawing

	60"	80"
Shipping dimensions:	6-1/4" x 7" x 61-1/2"	6-1/4" x 7" x 77-1/8"
Weight of unit:	14.0 Lbs.	16.4 Lbs.
Shipping weight:	17.3 Lbs.	20.4 Lbs.

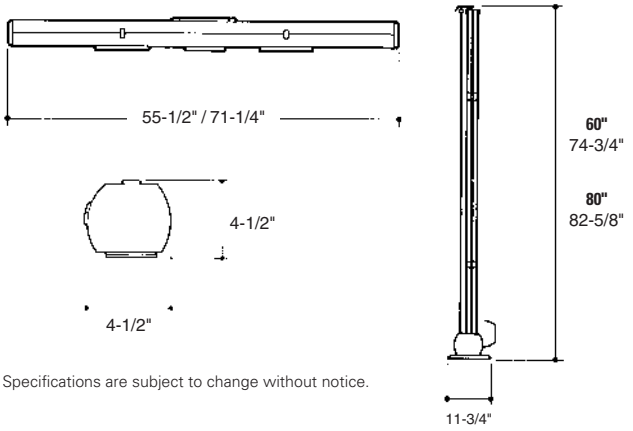

Note: Specifications are subject to change without notice.